

Fault Information

Fault Code Description	
This fault code is set when the voltage applied at the control unit is < 9 V. When the voltage supply reaches the nominal range again during the ignition run, the warning lamps go out, and the fault entry stored in the fault memory is retained.	
Fault Code Conditions	
General Conditions	
Terminal Condition	Terminal 15 on
Driving Conditions	
Fault Time Condition	
Voltage supply < 9 V for at least 30 s when stationary or voltage supply < 9 V for at least 0.5 s during riding.	
Service Plan	
Check battery, terminal clips; Check leads / wiring harness; Check plug connector, wiring harness to control unit;	
Fault Impact	
Started ABS control operation is if possible terminated, then the ABS control function is deactivated; Integral function deactivated;	
Warnings	
Warning Lights	ABS indicator and warning lamp active
Control Center Messages	
Service Notes	
When the engine is started (ignition start, speed 0), the fault message is suppressed.	